

# # 4

-SPACE STATION TTM-

DESIGN SELECT

CKK ELECTRONIC POWERED BY SINVERTEK ELECTRONIC CO., LTD.

[www.ckkelectronic.com](http://www.ckkelectronic.com)

**PEDAL LED -**

This LED indicates the pedal on / off

**TAMPO LED -**

This LED indicates the delay time

**BLEND -**

This knob controls the mix ratio of dry signal and wet signal

**FEEDBACK -**

This knob adjusts the number of reflection

**MONO OUTPUT -**

Connecting this jack to the input of a guitar amp  
Use this for mono

**STEREO /THRU OUTPUT-**

Connecting this jack to the input of a guitar amp.  
Use this for stereo.  
Please see Function card for THRU output

**MOD -** This switch controls modulation rate. UP- SLOW / MID-OFF / DOWN-FAST

**REVERB -** This knob adjusts the reverb

**DELAY /TAP DIV/**

**MOD TYPE-** This knob adjusts the delay time. If tap, this knob controls TAP DIV. please see the Function Card for MOD TYPE

**INPUT -**

This jack accepts the signal coming from a guitar or other musical instrument.

**CTRL INPUT -**

This jack accepts external control switch. Please see Function card for more info.

**POWER -**

Only accepts the connection of a 9V DC adaptor.  
Center negative polarity. **NEVER PLUG INTO VOL HIGHER THAN 9V DC**

**PEDAL FOOTSWITCH -**

This switch turns the effect on / off.

**TAP TAMPO:** Pressing and holding this switch, until the TAMPO LED flashes blue, then enter Tap Tampo, using this switch to tap tampo, and using DELAY/TAP DIV/MOD TYPE knob to adjust TAP DIV. Pressing and holding this switch, until the TAMPO LED flashes yellow, then exit Tap Tampo.



**- WARNING -** - Please only use 9v DC adaptor. Center negative polarity  
- NO BATTERY OPTION - Please don't remove the back plate

## - FUNCTION -

**MODULATION TYPE SELECT** - SPACE STATION PRO TTM Features 3 types of modulation. When the PEDAL SWITCH used as Bypass (not Tap), pressing and holding PEDAL SWITCH, then rotating DELAY/TAP DIV/MOD TYPE knob, TAMPO LED flashes blue. Each time the TAMPO LED flashes, the modulation type changes.

**BYPASS TYPE SELECT** - Pressing and holding the PEDAL SWITCH, then plugging in the DC power plug, the PEDAL LED flashes, the Bypass type switches between Buffer Bypass and Trail Bypass.

**EXTERNAL CONTROL SWITCH FUNCTION SELECT** - External control switch can be used as Bypass or TAP TAMPO. Pressing and holding the external control switch, then rotating the DELAY/TAP DIV/MOD TYPE knob, until the TAMPO LED flashes blue, the external control switch switches between Bypass and TAP TAMPO.

**EXIT EXTERNAL TAP TAMPO** - When the external control switch used as TAP TAMPO, the DELAY/TAP DIV/MOD TYPE knob used as TAP DIV, Pressing and holding the external control switch, until the TAMPO LED flashes blue, then exit TAP TAMPO, and the DELAY/TAP DIV/MOD TYPE knob used as DELAY.

**STEREO OUTPUT AND THRU OUTPUT SWITCH** - Pressing and holding the external control switch, then plugging in the power plug, the STEREO / THRU OUTPUT jack switches between stereo output and direct (THRU) output.